


REV.	DATE	DESCRIPTION	DR

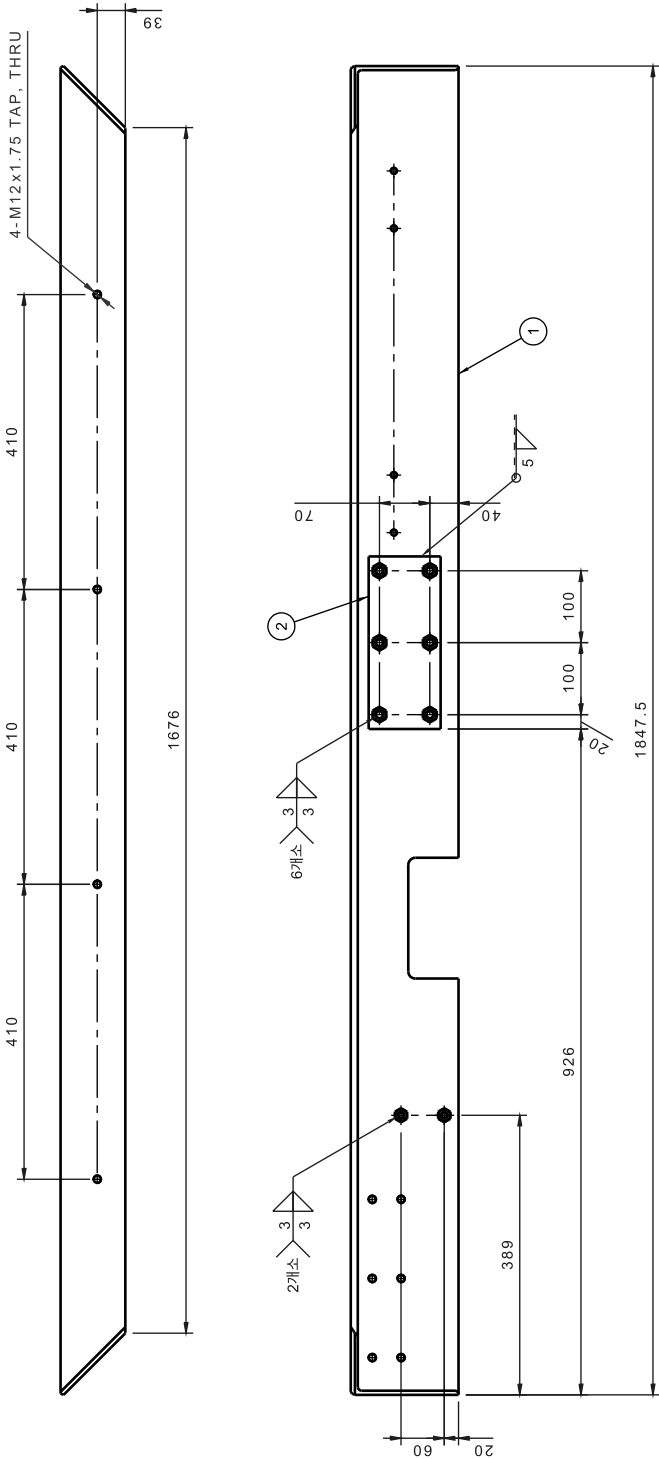


NOTE

- 현대에버다임 도장 작업 지침(EDI-07-1301)을 준수하여 도장 작업 할 것.
- 현대에버다임 용접 지침(EDO-I-Q015B)을 준수하여 , 용접 작업 할 것.
- 날카로운 모서리나 BURR는 제거할 것.
- 용접에 의한 열 변형에 주의 할 것.

4	S4016603	-1	HEX NUT	4T	2	M10x1.5-ZPC3
3	S4016703	-1	HEX NUT	4T	6	M12x1.75-ZPC3
2	2110DN-0058-001	-1	PLATE	SM335A	1	PL6
1	2110DN-0013	-1	ANGLE	SM355A	1	90x90x10
Item	Part No.	Rev.	Part Name	Mat.	Qty	Spec
MODEL			DWG No.			
DN			2110DN-0058			
MATERIAL			ANGLE ASSY			
DATE			DR		Scale	
20250513			영규홍		1:5	
					WT (Kg)	
					32.76	
					PAPER	
					A2	
					SHEET	
					1 / 2	
					12 ● 3DC EXPERIENCE	

REV.	DATE	DESCRIPTION	DR

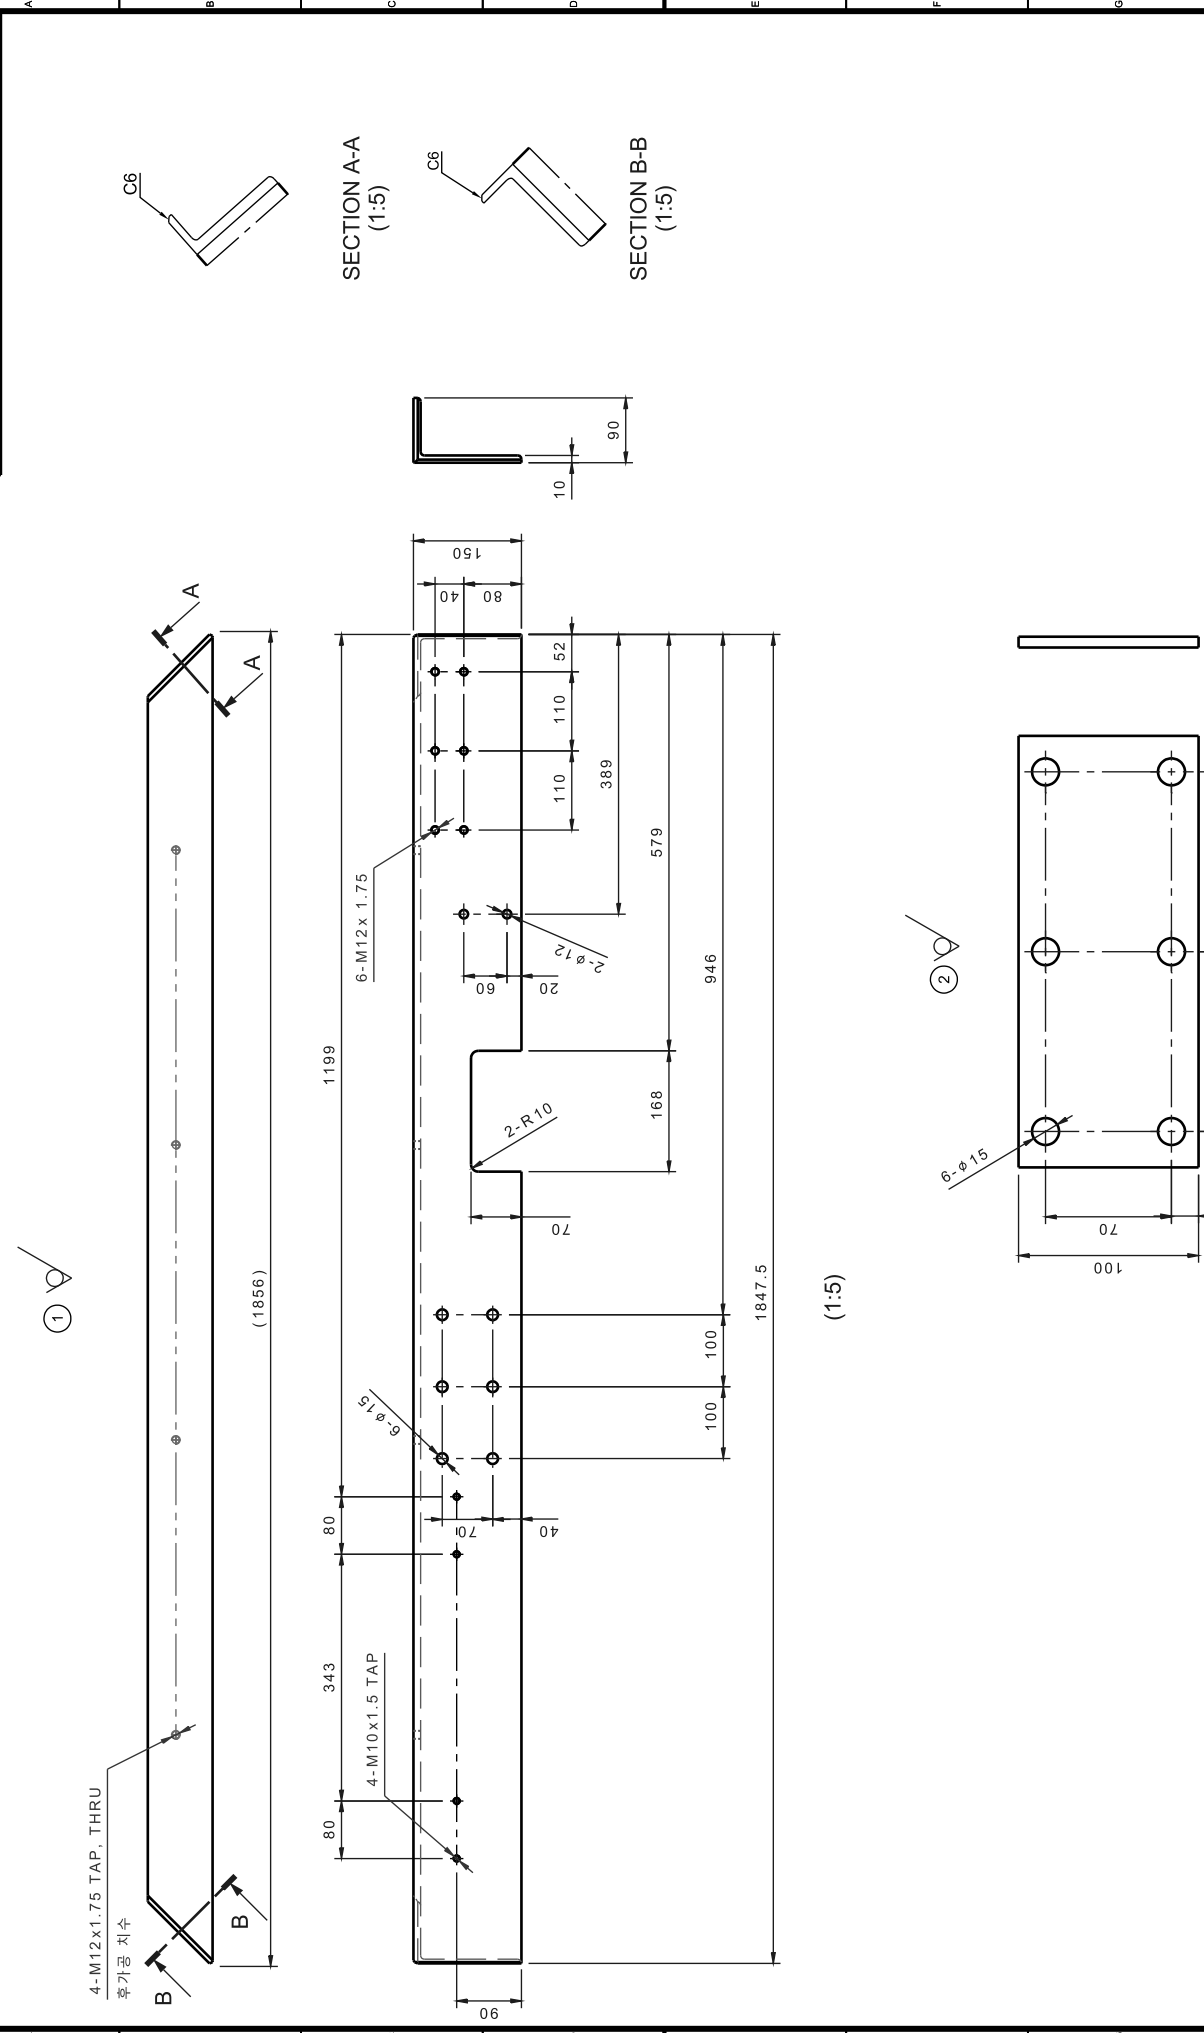

MODEL	DN	DWG NO.	2110DN-0058	REV.	-1
MATERIAL		TITLE	ANGLE ASSY		
DATE	20250513	SPEC.		WT (Kg)	32.76
DR	영규홍	Scale	1:5	PAPER	A2
				SHEET	2 / 2
					12 ● 3DC EXPERIENCE

NOTE
1. 날카로운 모서리나 BURR는 제거할 것.